




The model VIS-8008 is a 2-Channel 315 MHz charcoal and silver remote supplied with a quick-disconnect key ring. This transmitter (remote) is designed for use with the VISIONIS VIS-8007 2 channel receiver. The remote operates for opening doors, garage doors, and gates. The receiver programs each specific code; no unauthorized person can gain access to the system by reprogramming or duplicating the Transmitter (remote). This transmitter (remote) can be programmed locally into the memory of the receiver (VIS-8007).

Model No.	VIS-8008
Frequency	315MHz
Chip	1527
Input Voltage	6V
Button Quantity	2 buttons
Input Power	0.06W
Input Current	0.01A
Operating Distance	Up to 160ft (50m) - The maximum range needs to be used in an open area. The distance will start to diminish based on some type of interference such as metal, concrete and others.

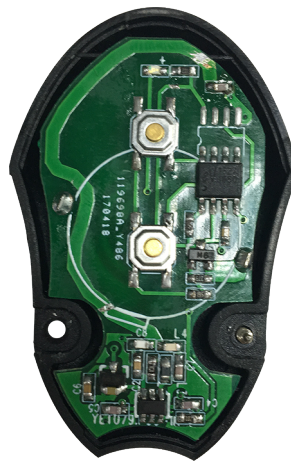

**VIS-8008 Board**



**Disclaimer:** VISIONIS reserve the right to go ahead with any modifications of models or features or price without forewarning. All the information and specifications stated in this document are current at the time of publication. Attention: We are not responsible for the improper installation of this kit. If you are not handy with electrical equipment you should contact a professional electrician. You will also need to check with your local Fire authority to see if you need anything else to comply with local Fire Codes. We are not responsible for any damage or fees that can occur.



[sales@visionistech.com](mailto:sales@visionistech.com)



[www.visionistech.com](http://www.visionistech.com)

## Instructions to program a new Transmitter (remote):

Each VIS-8007 Visionis receiver can program up to 50 Transmitters (remotes) (VIS-8008).

- Before you program this function make sure you have one of your remotes on hand.
- Now Press the “Learning Button” once and release right away then immediately press the button on the remote one time and release.
- After that has been done you will see the LED light on the Receiver quickly flash and this mean that the remote has been programmed.
- The Receiver can learn as much as 50 remotes at the same time simultaneously.

## Deleting Remotes

If you remote has been lost or misplaced or you need to delete it from the receiver for any reason. Go ahead and press the “Learning Button” for about 8 seconds until you see the red solid light go away.

**Warning:** *This feature will delete all the remotes that you have programmed so if you have other Remotes, they must be reprogrammed.*

<b>⚠ WARNING</b>	
<ul style="list-style-type: none"><li>• <b>INGESTION HAZARD:</b> This product contains a button cell or coin battery.</li><li>• <b>DEATH</b> or serious injury can occur if ingested.</li><li>• A swallowed button cell or coin battery can cause <b>Internal Chemical Burns</b> in as little as <b>2 hours</b>.</li><li>• <b>KEEP</b> new and used batteries <b>OUT OF REACH</b> of <b>CHILDREN</b>.</li><li>• <b>Seek immediate medical attention</b> if a battery is suspected to be swallowed or inserted inside any part of the body.</li></ul>	