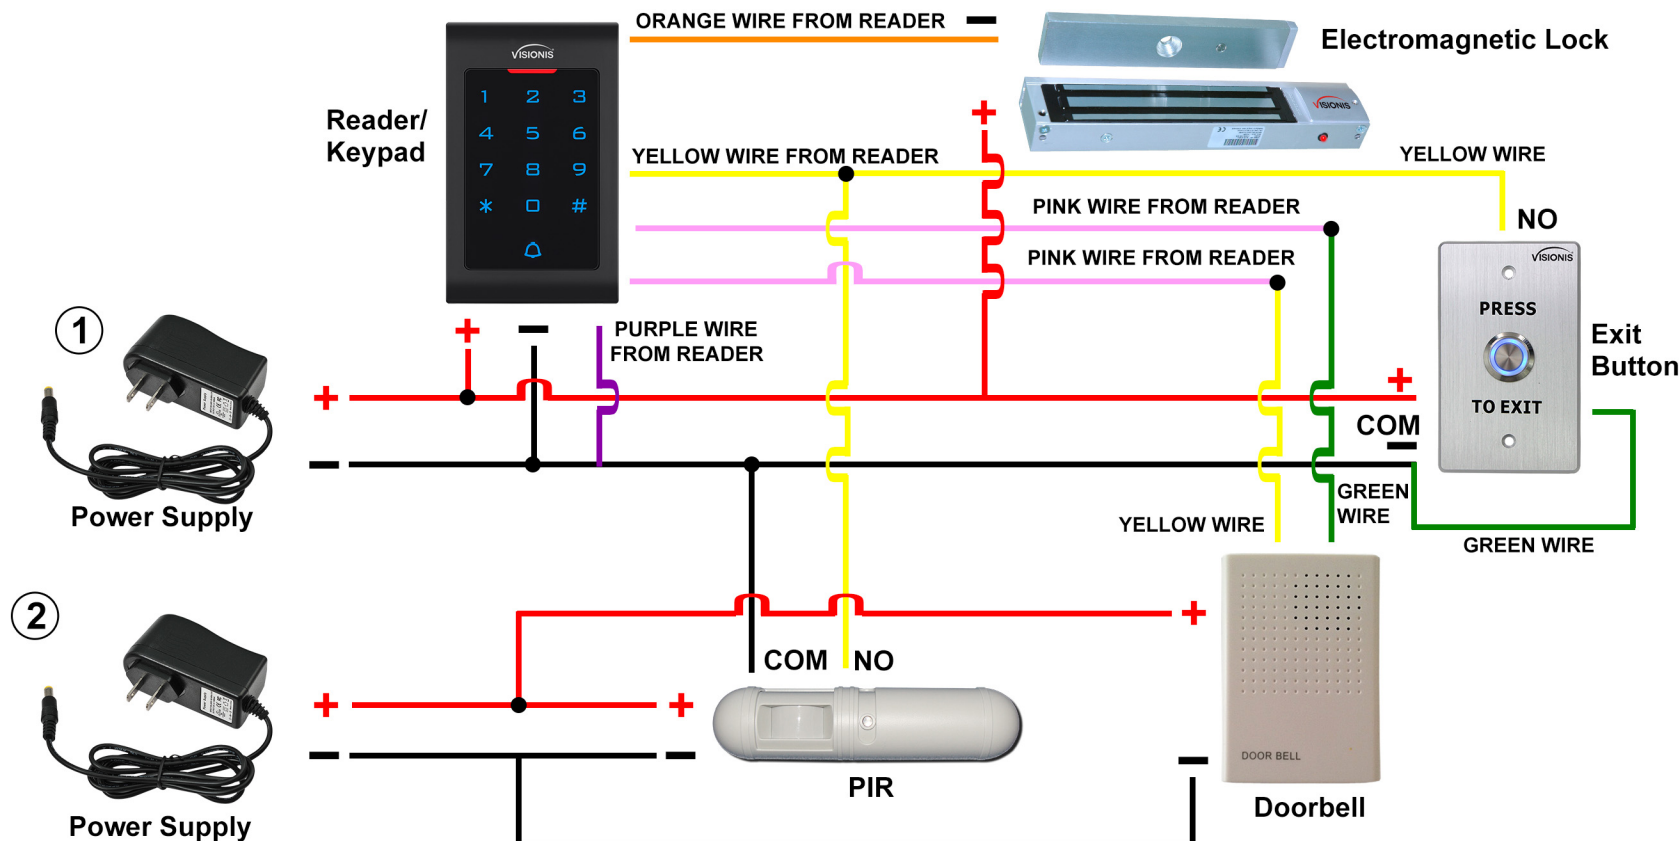# FPC SECURITY

100% SATISFACTION GUARANTEE

INSTALLATION DIAGRAM FOR INDOOR READER/KEYPAD, EXIT BUTTON AND PIR

This Diagram is for kits: FPC-5324, FPC-5325, FPC-5328, FPC-5329, FPC-5332, FPC-5333

ORANGE WIRE FROM READER

Electromagnetic Lock

Reader/Keypad

VISIONIS

YELLOW WIRE FROM READER

YELLOW WIRE

PINK WIRE FROM READER

PINK WIRE FROM READER

NO

PURPLE WIRE FROM READER

PRESS TO EXIT

VISIONIS

Exit Button

① Power Supply

+ −

COM

GREEN WIRE

YELLOW WIRE

GREEN WIRE

② Power Supply

COM NO

YELLOW WIRE

PIR

DOOR BELL

Doorbell

ATTENTION! QUICK TIPS, MUST READ BEFORE INSTALLING:

. Make sure to cut off the connectors on both power supplies, then strip the wire leads before installing.

. In order to properly install this kit it is recommended that you use 18/2 or 20/2 gauge wire.

. Before installing this kit, check with your local fire Authority for the compliance of fire codes.

. We are not responsible for the improper Installation of this kit. This is an example of how it should be installed but all applications are different.

. If you are not handy with electrical components, please consult with a certified electrician or Locksmith.

. Make sure that when you are installing this kit, please have all components turned off. We are not Responsible for any type of short circuits.

ATTENTION:

4 ways to view our installation videos:

1) Scan this QR code.

2) Visit:
https://youtu.be/-wvc7xJ8lsg

3) Type in the number of your kit to the youtube search box.
Example: FPC-5324

4) Go to www.fpc-security.com and type in the model number of your kit in the search box after you will click on the picture then you will see the video Below the Description.

Need assistance? Contact Us: 1-888-504-3318 // support@fpc-security.com // www.fpc-security.com