


INSTALLATION DIAGRAM FOR ELECTROMAGNETIC LOCK, WIRELESS RECEIVER AND EXIT BUTTON

This Diagram is for kits: FPC-5008

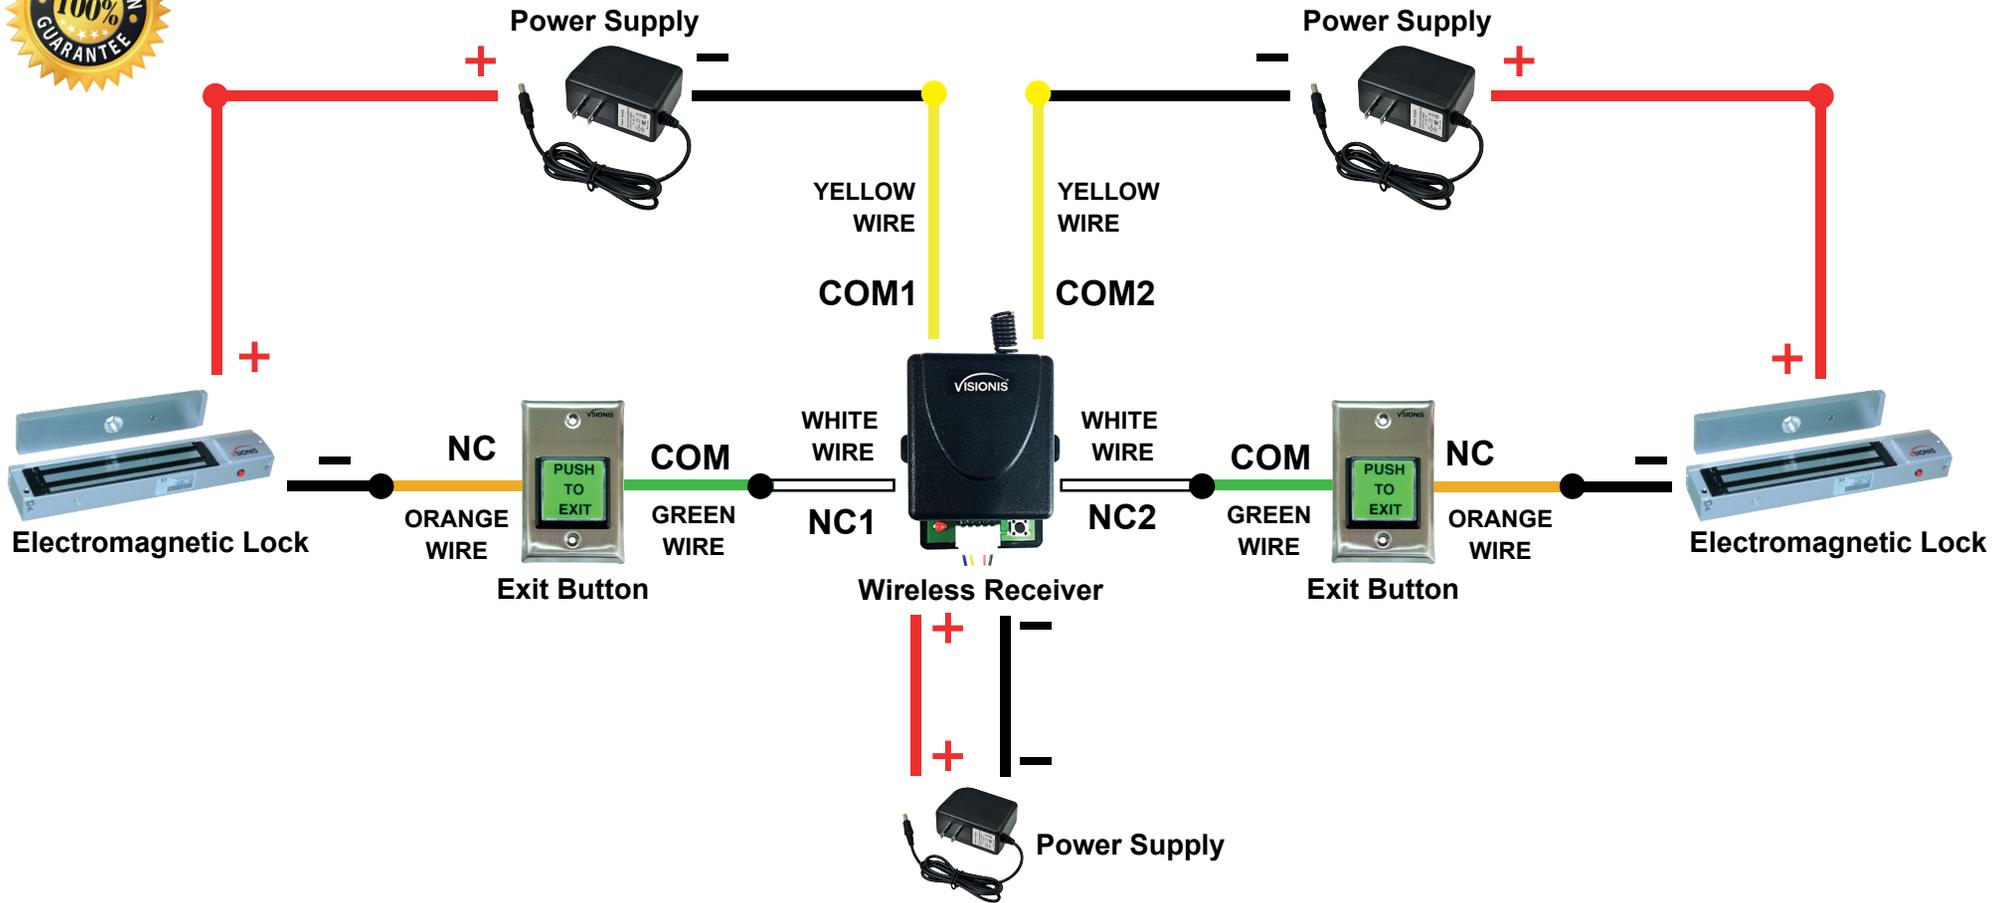

ATTENTION! QUICK TIPS, MUST READ BEFORE INSTALLING:

- Make sure to cut off the connectors on both power supplies, then strip the wire leads before installing.
- In order to properly install this kit it is recommended that you use 18/2 or 20/2 gauge wire.
- Before installing this kit, check with your local Fire Authority for the compliance of fire codes.
- In order to locate where you can identify the +, - NC, NO or Open contacts on the receiver or exit button please refer to the manual of the exit button and receiver.
- We are not responsible for the improper installation of this kit. This is an example of how it should be installed but all applications are different.
- If you are not handy with electrical components, please consult with a certified electrician or Locksmith.
- Make sure that when you are installing this kit, please have all components turned off. We are not responsible for any type of short circuits.

Need assistance? Contact Us: 1-888-504-3318 // support@fpc-security.com // www.fpc-security.com