


TANE ALARM PRODUCTS



"We Contact The World"®

Installation Instructions for MET-44 Surface Mount Armored Overhead Door Switch GAP 2"

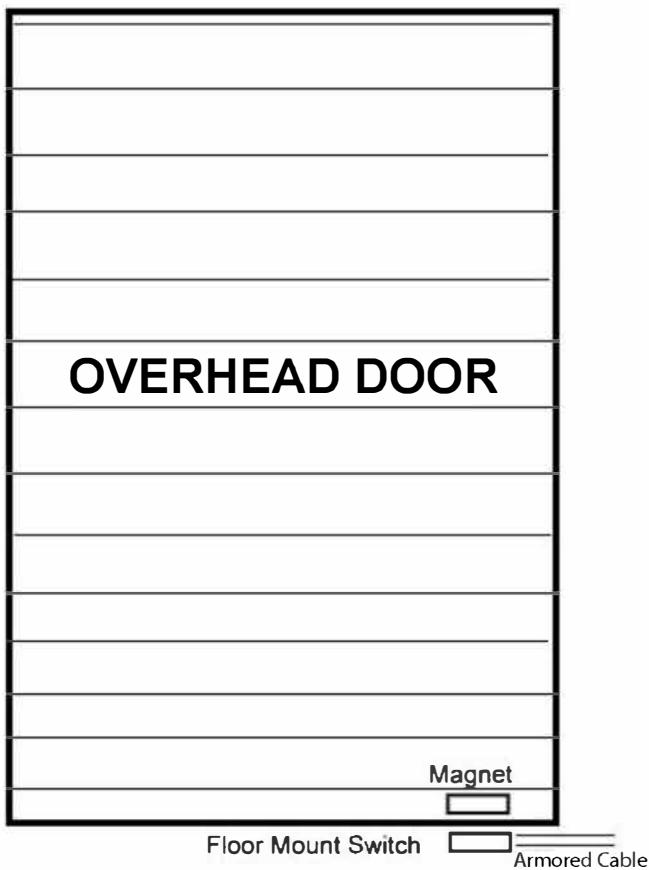

Floor mount the switch in a "forklift safe" location directly beneath the overhead door
Mount the magnet directly onto the overhead door bottom with the provided mounting bracket directly above and parallel to the switch
Make sure the gap between contact and magnet is NOT less than 1/2" apart
Splice the 18" or 36" armored cable into alarm circuit