


# TANE ALARM PRODUCTS



## Installation instructions for MINI-10 family of 3/8" Dia. Recessed Door and Window Contacts

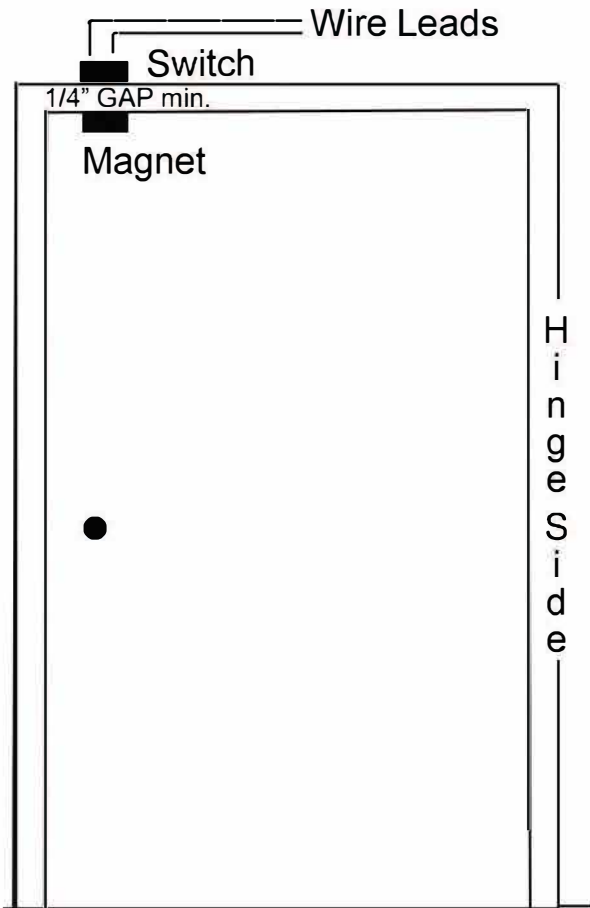

Drill 3/8" hole in window or door frame (NOT on hinge side) to mount the switch

Drill 3/8" hole in window or door to mount the magnet

Make sure Gap is not less than 1/4" between switch and magnet

Splice leads from switch into alarm circuit

NOT for use with Steel doors and windows

A compatible power source with power-limited output, and that is UL® Listed for Residential or Commercial Burglary Alarm applications shall be used with the magnetically-actuated switch.