


# TANE ALARM PRODUCTS



*"We Contact The World"®*

## Installation instructions for STB-10 family of 3/8" Dia. Recessed Door and Window Contacts

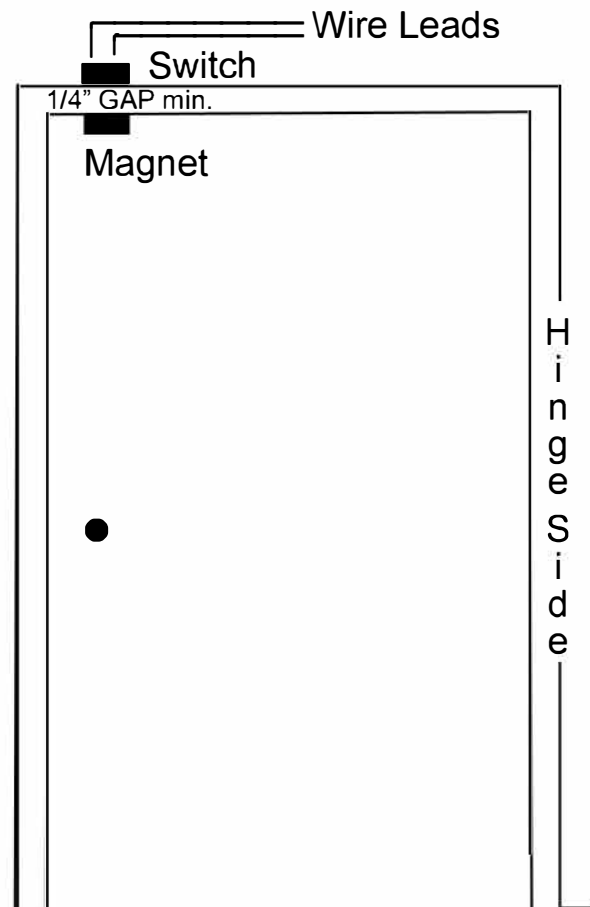

- Drill 3/8" hole in window or door frame (NOT on hinge side) to mount the switch
- Drill 3/8" hole in window or door to mount the magnet
- Make sure Gap is not less than 1/4" between switch and magnet
- Splice leads from switch into alarm circuit
- NOT for use with Steel doors and windows