


TANE ALARM PRODUCTS



"We Contact The World"®

Installation instructions for SM-20 WG family of Commercial - Surface Mount - Door and Window Contacts

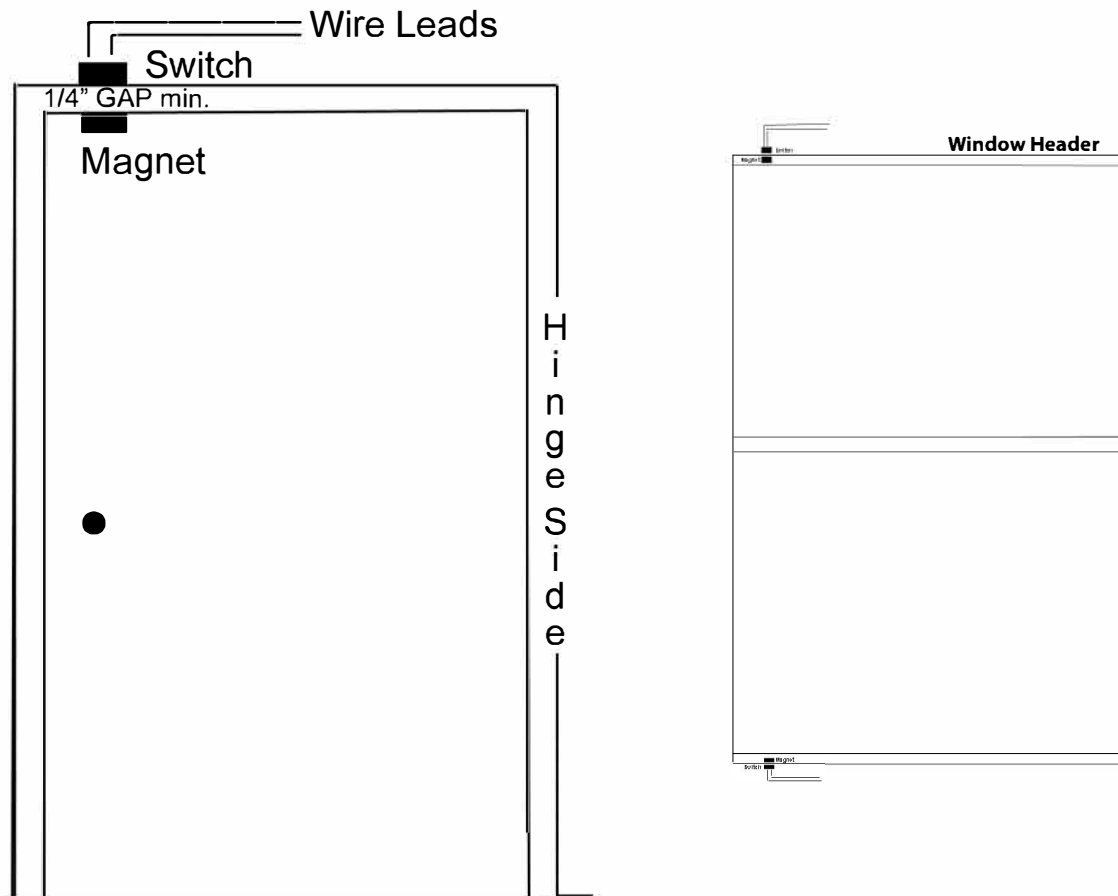

- Surface mount switch at top or side (NOT on hinge side) of door or hinged window frame
- On double hung window, surface mount the switch at top, side or bottom of window frame
- Surface mount the magnet parallel to the switch
- Make sure Gap is not less than 1/4" between switch and magnet
- Splice leads from switch into alarm circuit
- NOT intended for Steel doors or windows