


# TANE ALARM PRODUCTS



## Installation instructions for TANE PILL, TANE PILL SL, TANE PILL TC Surface Mount Contacts GAP 1/2"

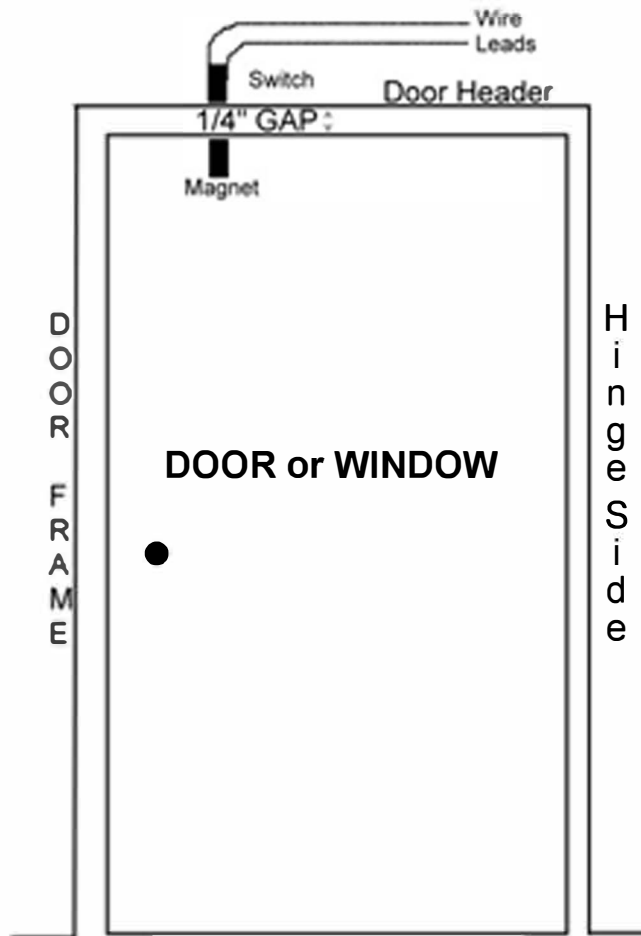

- Attach switch to header or side of door or window frame (NOT on hinge side)
- Attach magnet to door or window adjacent to the switch
- Make sure Gap is not less than 1/4" between switch and magnet
- For TANE PILL TC insert leads from alarm circuit under the switch terminals
- For TANE PILL & TANE PILL SL attach wire leads to alarm circuit
- NOT for use on Steel, surfaces